


PRO-95

Dual Trunk-Tracking Handheld Scanner

Refer to your Owner's Manual for complete instructions.

1. INSTALL BATTERIES

- Use the supplied black battery holder for alkaline batteries.
- Use the supplied yellow battery holder for rechargeable batteries.

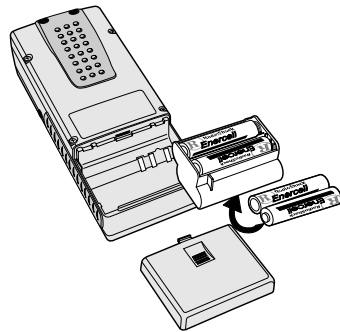

2. CONNECT THE SUPPLIED ANTENNA



- #### 3. ADJUST VOLUME/ SQUELCH
- Adjust **VOLUME** to a comfortable listening level.
 - Turn **SQUELCH** fully counter-clockwise.
 - Adjust **SQUELCH** until the hissing sound stops.

LISTEN TO A WEATHER FREQUENCY

- F** Press **WX**. The scanner scans the weather band then stops within a few seconds on the strongest weather channel. See "Listening to a Weather Channel" on Page 40 of your Owner's Manual.


SELECT A FREQUENCY

- B** 1. Press **TUNE**. The scanner tunes up or down.
- E** 2. Use the number keys to enter the frequency, then press **ENTER**. You hear the frequency. See "Manually Tuning a Frequency" on Page 39 of your Owner's Manual.

SAVE A FREQUENCY YOU SELECTED


- A** 1. Press **MANUAL**, then enter the bank and channel number where you want to store the frequency (see "Channel Storage Banks" on Page 19 of your Owner's Manual).
- C** 2. Press **MANUAL** then press **PGM**.
- D** 3. Use the number keys and **/DELAY** to enter the frequency, then press **ENTER**. See "Storing Known Frequencies into Channels" on Page 26 of your Owner's Manual.

NEED FREQUENCIES?
Call (937) 395-1456 Monday through Friday, 9AM to 5PM Eastern Time for your local frequencies. Your local RadioShack store can also help you find great frequencies in your area.

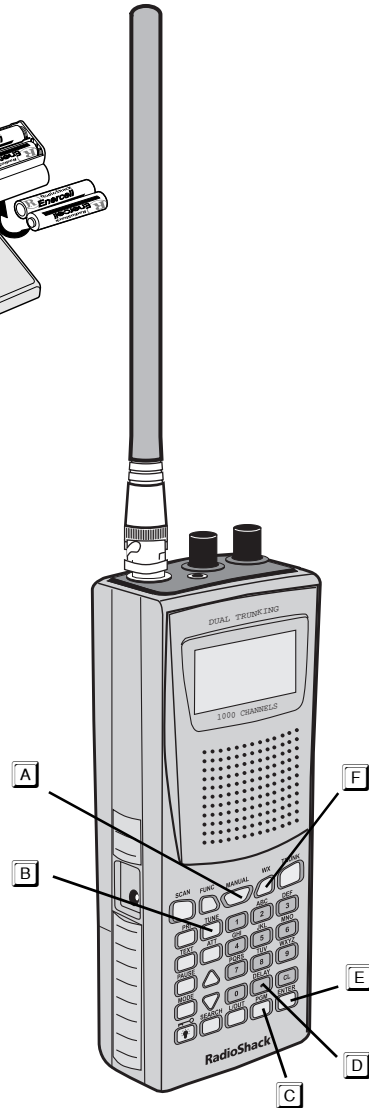

OPTIONAL ACCESSORIES

Use a 9V, 300 mA AC adapter and size C Adaptaplug to power the scanner from AC power and recharge rechargeable batteries.

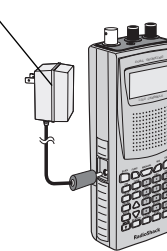

Use a connecting cable to connect two scanners and copy frequencies from one to the other.

